
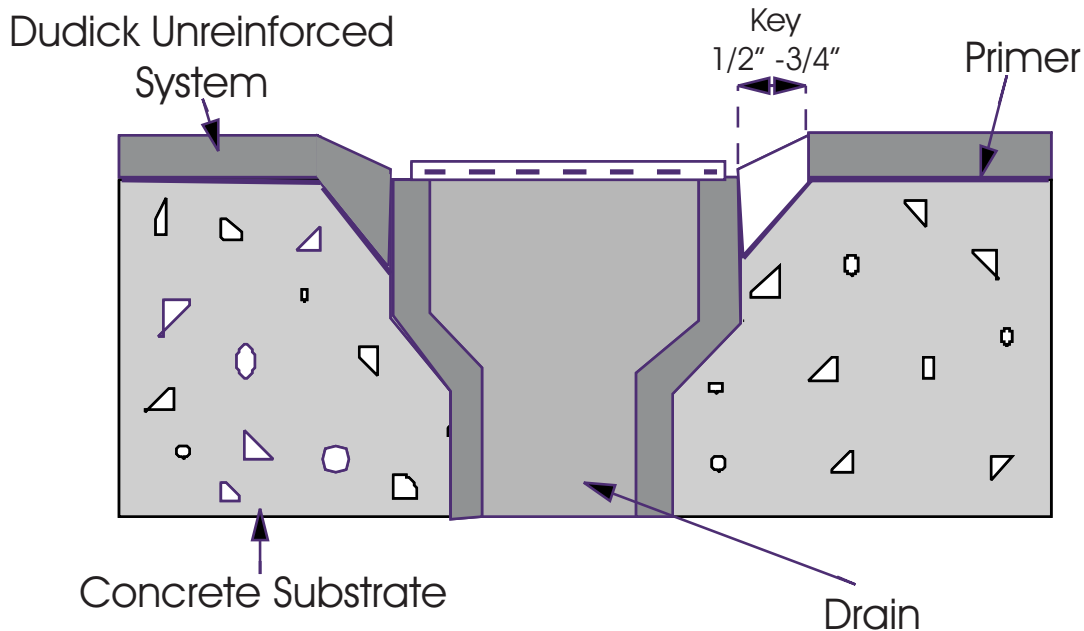


Typical installation details



DESIGN AND DETAIL SPECIFICATIONS

1. Chip out at groove key approximately 1/2" - 3/4" from edge of drain and 1/2" - 1" deep. Remove all loose material.
2. Prepare concrete, prime floor surface and groove with specified material. Allow to cure.
3. Install Dudick system terminating at edge of drain. Allow to cure.

Detail: DRAIN DETAIL UNREINFORCED SYSTEM	Project:	Project#:
		Date:
Scale: 6" = 1'0" 		Drawing Name: Drain Detail Unreinforced System