



## LEADERSHIP IN TECHNOLOGY & SERVICE

### Typical installation details

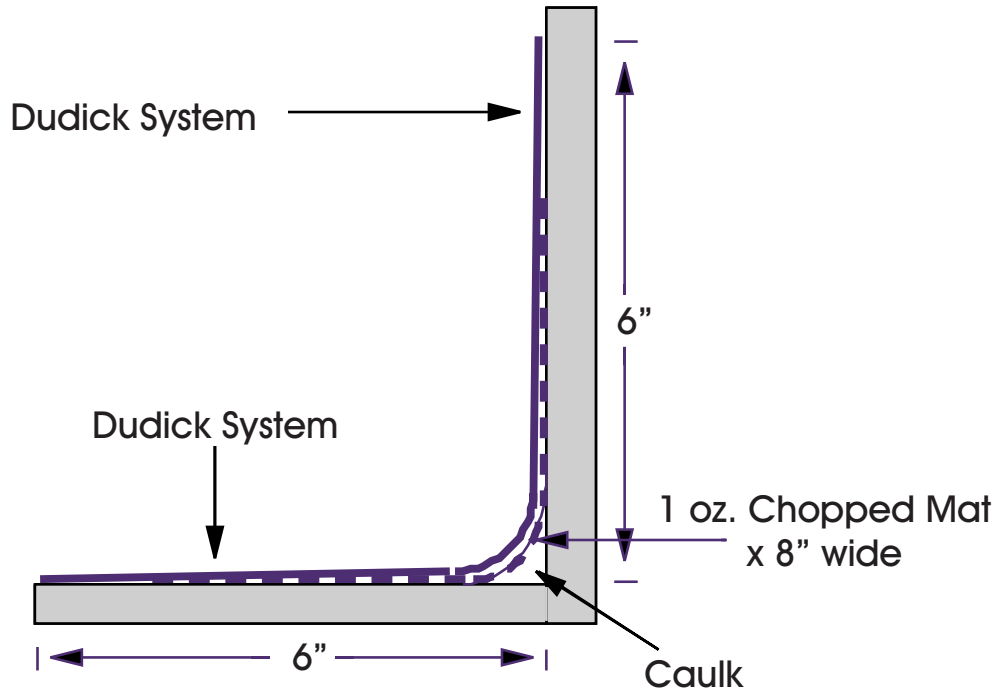

1. Blast floor and wall to the specified profile.
2. Prime with designated Dudick primer and allow to cure.
3. Apply a 1"- 2" radius of specified caulk at floor/wall joint and allow to cure.
4. Apply 1 oz. mat 4" up the wall and 4" onto the floor.
5. Saturate with Primer and allow to cure.
6. Apply specified Dudick systems on walls and on floor and allow to cure.

Detail: <b>FLOOR-WALL COVE HINGE JOINT</b>	Project:	Project#:
		Date:
Scale: 		Drawing Name: Floor-Wall Cove Hinge Joint